



Anziehvorschrift für Zylinderkopf	passend für / suitable for adaptable à / adaptable a BMW
Tightening Instructions for Cylinder Head	
Instructions de serrage pour culasse	
Prescripciones de apriete para culatas	

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

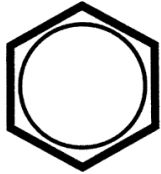

802.720
M 12 x 157

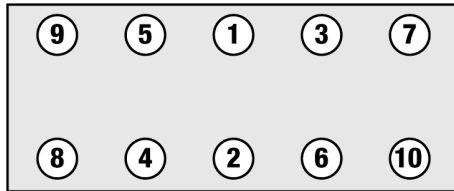

Anziehen/ Tightening/ Serrage/ Apriete	*	58 - 62 Nm
	●	15 min
	▶	30° - 36°
	✱	25 min
	▶	20° - 30°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
✱	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
▶	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. M 10

WALLOTHNESCH.COM

Nr. 2

-
-
-
-
-
-
-

R _z	15-20 µm	11 µm	11-20 µm
R _{max}	20-25 µm	15 µm	15-20 µm
W _t	8-10 µm		