



<b>Anziehvorschrift für Zylinderkopf</b>	passend für / suitable for adaptable à / adaptable a <b>BMW</b>
<b>Tightening Instructions for Cylinder Head</b>	
<b>Instructions de serrage pour culasse</b>	
<b>Prescripciones de apriete para culatas</b>	

Schraubenkopf / Head shape  
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

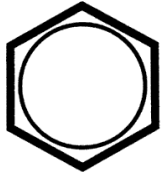

802.720  
M 12 x 157

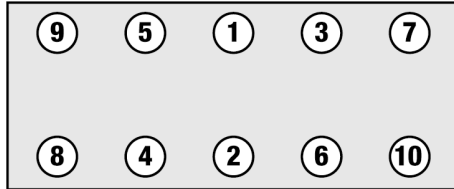

Anziehen/	*	58 - 62 Nm
Tightening/	●	15 min
Serrage/	▶	30° - 36°
Apriete	★	25 min
	▶	20° - 30°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
▶	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. M 10

**WALLOTHNESCH.COM**

**Nr. 2**

- 
- 
- 
- 
- 
- 
- 

$R_z$	15-20 $\mu\text{m}$	11 $\mu\text{m}$	11-20 $\mu\text{m}$
$R_{max}$	20-25 $\mu\text{m}$	15 $\mu\text{m}$	15-20 $\mu\text{m}$
$W_t$	8-10 $\mu\text{m}$		